




AKE.207.011.01.01
HOT BANQUETTE
CONTROLLER
USER MANUAL




HOT BANQUETTE CONTROLLER USER MANUAL

AKE-OP-202

1.DEVICE DIMENSIONS

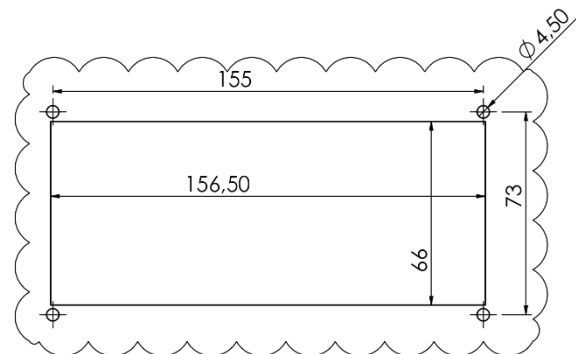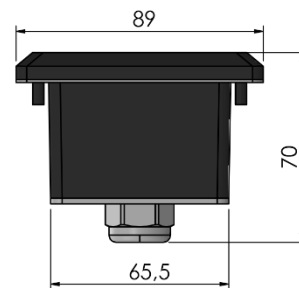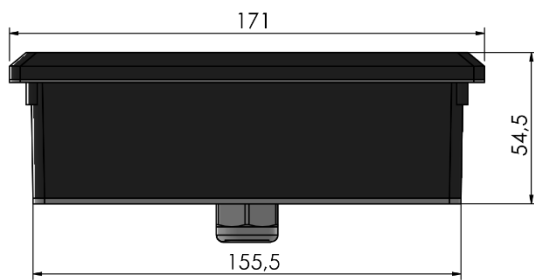

2.DEVICE CONNECTION DIAGRAM

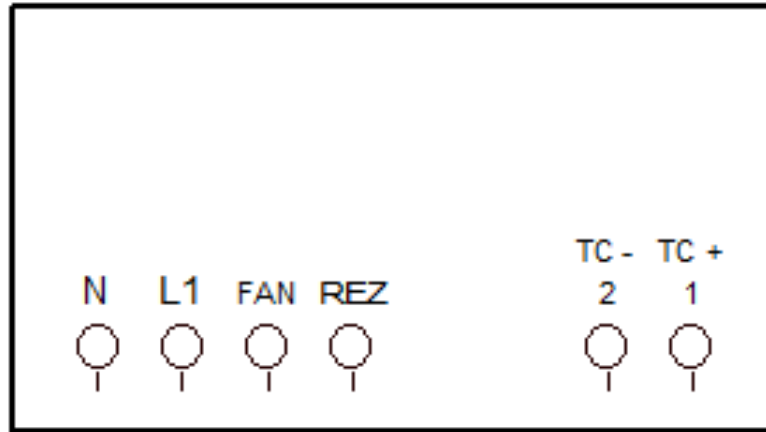

3. CAUTIONS

- Be sure to read the operating instructions before using the appliance and follow the instructions and cautions in the manual when using the appliance. Otherwise the responsibility for accidents and damages that may belong to the buyer.
- Installation and connection of the device should be done by experienced technicians in accordance with the diagram. Otherwise the responsibility belongs to the buyer.
- The operating ambient temperature of the device should be between 0 to 50 °C.
- The supply voltage must be checked before the device is energized.
- Precautions must be taken to prevent liquid flow into the device and metal clips to conduct. Otherwise, there may be accidents such as fire and electric shock.
- In case of any malfunction, do not interfere with the device. If the malfunction continues, notify the service in writing with the explanation.
- Electrical and mechanical precautions must be taken to prevent accidents and damages if the device is broken while being attached to the machine.
- Never remove the warranty label. Otherwise, your device is not covered by the warranty. The appliance must be repaired by authorized service personnel.

- The cables carrying the sensor and input signals to the device shall be prevented from being moved and influenced separately as far as possible from the inductive load cables operating as feed, control, switching.
- Shielded cables should be selected for the cables that carry the sensor and input signals to the device, and the cable shield must be connected to the ground.
- If more than one electronic device is used, separate feeder lines for each device must be towed. Insulation traces and line filters should be used on the supply line where there is excessive electrical noise.
- No control circuit should be connected to the device supply line.
- The appliance should be cleaned with a soft, damp cloth with a front panel. Thinner etc. do not use substances.
- Please do not use high-torque screwdrivers when mounting the device.

4. . HOW TO USE TOUCH PANEL

- When the machine is power on, do not touch all buttons until the light of the On / Off button is on.
- As indicated in the following illustration



5.CİHAZ TANITIMI

It is an elegant and stylish control panel designed for running Hot Banquette Vehicles. It provides ease of use with its high sensitivity touch buttons. It sets its users with technology with warning lights, audible warning system, and clear displays.Thanks to the temperature sensor that can be connected to control panel, the products can be delivered in desired manner. The flexible, impact

resistant, waterproof panel makes cleaning easier and its lifetime longer. Company-focused designs can be made with changeable visual design.



5.1 STANDART TEKNİK ÖZELLİKLER

- 1 unit 2 digit 7 segment display
- 3 units LED illuminated touch button
- 1 unit 220VAC output (Max: 30A)
- 1 unit 220VAC outputMax: 10A)
- 1 unit thermocuple unit
- 220-240VAC operating voltage
- Warning Buzzer System
- Impact resistant, waterproof, joint protection front panel
- Plastic enclosure

5.2 OPTIONAL FEATURES

- Different supply voltage 12-24V AC/DC
- Customer specific label and software change

6.DEVICE FUNCTIONS

	<p>START-STOP: Please hold down the Start/Stop button to activate or inactivate machine.</p>
	<p>TEMPERATURE SETTING: Please touch UP/DOWN buttons to alter set values of temperature. In normal, screen shows internal temperature. When the user touch UP/DOWN buttons, set values appears on screen.</p>

